

HURRICANE
BUBBLE HAZE X2 Q6
User Manual



Edition Notes

The Hurricane Bubble Haze X2 Q6 User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the Hurricane Bubble Haze X2 Q6 as of the release date of this edition.

Trademarks

Chauvet, Chauvet DJ, the Chauvet logo, and Hurricane are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

© Copyright 2026 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage, or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident, or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision; however, Chauvet has no obligation to make, and does not commit to make, any such revisions.

Document Revision

Go to www.chauvetdj.com for the latest version.

Revision	Date	Description
5	07/2026	Updated What Is Included section

TABLE OF CONTENTS

1. Before You Begin	1
What Is Included	1
Unpacking Instructions	1
Claims	1
Text Conventions	1
Symbols	1
Safety Notes	2
RF Exposure Warning for North America and Australia	2
2. Introduction	3
Product Overview	3
Product Dimensions	4
3. Setup	5
AC Power	5
Resetting the Breaker	5
Operating Fluids	5
Mounting	6
Orientation	6
Rigging	6
4. Operation	7
Control Panel Operation	7
Menu Map	7
LED Color Options	8
DMX Configuration	8
Starting Address	8
DMX Channel Assignments and Values	9
Standalone Configuration	10
Interval Set	10
Duration Set	10
Bubble Output	10
Haze Output	10
Blower Fan Speed	10
Wireless Remote Controller Configuration	11
Haze Output	11
LED Color Options	11
Wireless Transmitter	11
Color Speed	12
Master/Slave Mode	12
5. Maintenance	13
Clean Mode	13
Fog Machine Maintenance	14
Storage	14
6. Technical Specifications	15
Contact Us	16
Warranty & Returns	16

1. Before You Begin

What Is Included

- Hurricane Bubble Haze X2 Q6
- Power cable
- PowerCON to bare wire cable (EU only)
- Omega bracket
- WRC wireless remote control
- Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
<ENTER>	A key to be pressed on the product's control panel
ON	A value to be entered or selected

Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Safety Notes

These Safety Notes include important information about installation, use, and maintenance of the Hurricane Bubble Haze X2 Q6.



■ **ALWAYS:**

- ◆ Connect to a grounded circuit.
- ◆ Connect to operating voltages as specified on the product's spec sticker.
- ◆ Disconnect from power before replacing the fuse.
- ◆ Disconnect from its power source during periods of inactivity.
- ◆ Use a safety cable when suspending overhead.
- ◆ Heed all restrictions and warnings on the spec sticker.
- ◆ Mount in a location with at least 20 in (50 cm) of ventilation.
- ◆ Use Chauvet fluids.
- ◆ Drain the tank before transporting or storing the product.
- ◆ Keep the machine level.
- ◆ Clean the machine after every use.
- ◆ Clean around the product during and after use, as surfaces may become slippery.
- ◆ Close both valves prior to filling with fluids.

- In the event of a serious operating problem, stop using immediately.

- All fog/haze machines may set off smoke detectors.

■ **DO NOT:**

- ◆ Open this product or attempt any repairs. It contains no user-serviceable parts.
- ◆ Look at the light source when the product is on.
- ◆ Use if the power cable is crimped or damaged.
- ◆ Disconnect by pulling on the power cable.
- ◆ Allow flammable materials close to the product when it is operating.
- ◆ Touch the housing when it is on.
- ◆ Block any ventilation holes/slots in the housing.
- ◆ Connect to a dimmer or rheostat.
- ◆ Carry the product by its power cable.
- ◆ Operate in temperatures higher than 104°F (40°C).
- ◆ Expose to environments that exceed the Ingress Protection (IP) rating.
- ◆ Expose to rain or moisture.
- ◆ Use outdoors.
- ◆ Submerge.
- ◆ Set this product on a flammable surface.
- ◆ Touch the output nozzle. It may be hot for several hours after use.
- ◆ Drink the fluid.
- ◆ Add perfume, alcohol, gasoline or any other chemical to the fluid.
- ◆ Use for space-heating purposes.
- ◆ Obstruct the bubble wands or leave machine unattended.
- ◆ Overfill.




Keep this User Manual for future use. If the product is sold to someone else, be sure that they also receive this document.

RF Exposure Warning for North America and Australia

Warning! This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the user. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



2. Introduction

Product Overview

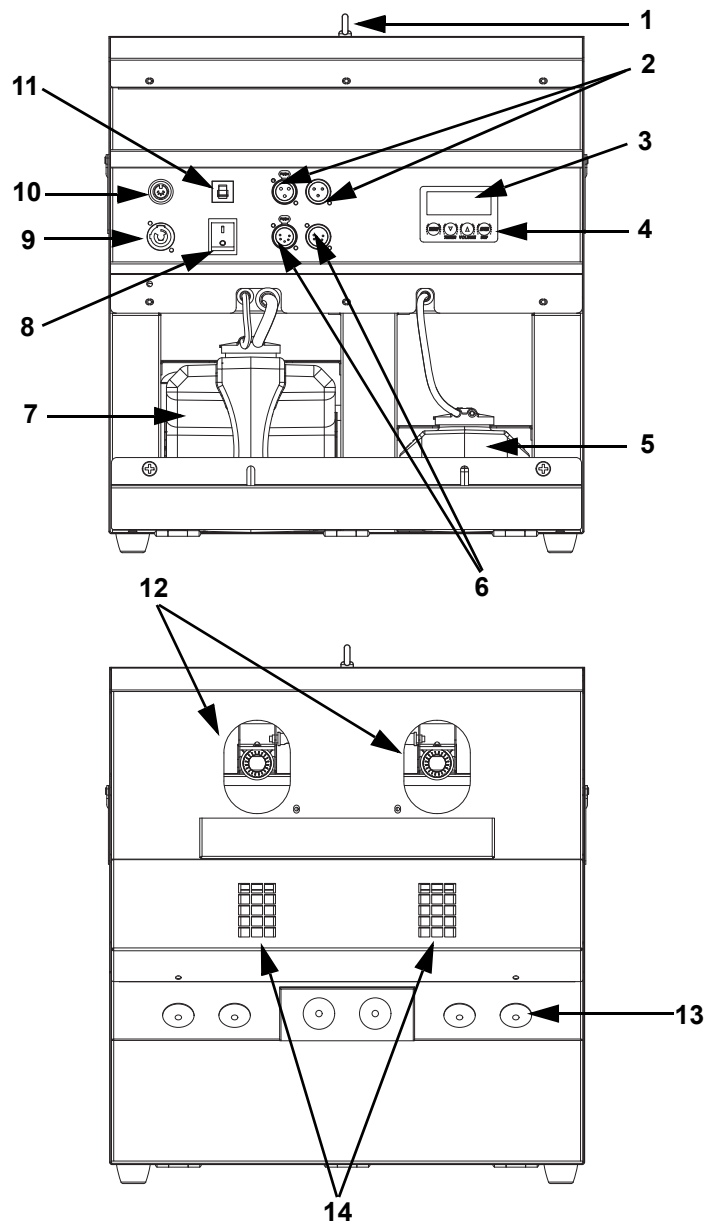

#	Name	#	Name
1	Safety loop	8	Power switch
2	3-pin DMX in/out	9	Power in
3	LED display	10	WRC in
4	Menu buttons	11	Circuit breaker
5	Haze fluid reservoir	12	Output nozzle (x2)
6	5-pin DMX in/out	13	RGB+UV LED (x6)
7	Bubble fluid reservoir	14	Blower fan (x2)

Product Dimensions

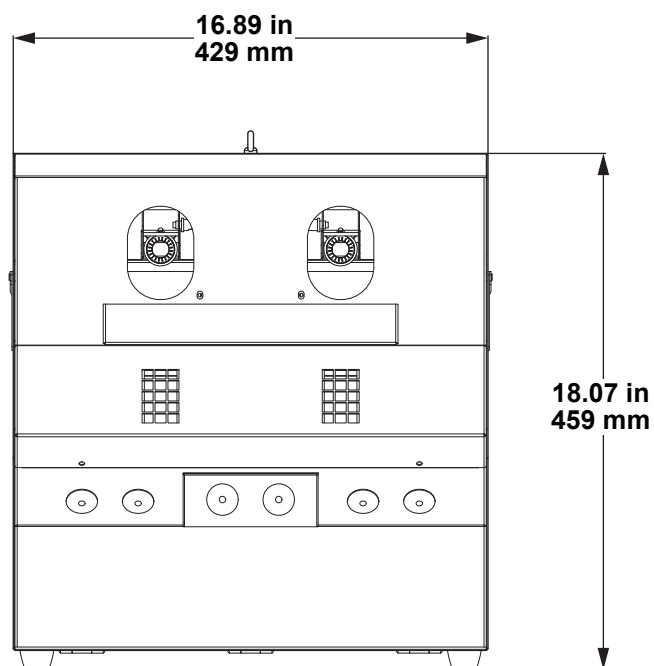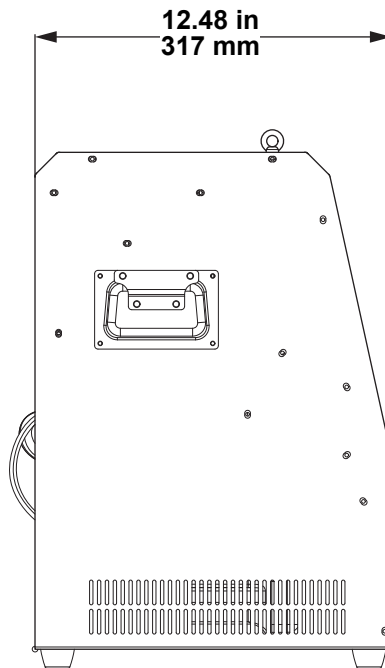

3. Setup

AC Power

The Hurricane Bubble Haze X2 Q6 has a fixed voltage power supply, and it can work with an input voltage range of either 120 VAC, 60 Hz or 230 VAC, 50 Hz, depending on the specific model.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart.

The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

Resetting the Breaker

This product is equipped with a resettable circuit breaker. If the breaker trips, all sections of this product will lose power.

1. Remove the power cord from main power.
2. Allow unit to cool for 15 minutes.
3. After 15 minutes, user may attempt to reset the breaker by pressing the button with their finger.
4. Plug the product's power cord into the power outlet and continue using as recommended.

Operating Fluids

The following fluids are optimized for use in the Hurricane Bubble Haze X2 Q6. Only use Chauvet approved fluids to assure satisfactory results. The use of unapproved fluid can damage the Hurricane Bubble Haze X2 Q6.

	US Product Name	EU Product Name
Optimized Haze Fluid	HDF, HFG	HF5, HFDJ5
Optimized Bubble Fluid	BJG	BF5

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).


Orientation

The Hurricane Bubble Haze X2 Q6 may be mounted in any position; however, make sure adequate ventilation is provided around the product.

Rigging

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) section for weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, such as an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity. The bracket has a 13-mm hole, which is appropriate for this purpose.
- When mounting the product on the floor, make sure that the product and cables are away from people and vehicles.

Mounting Diagram

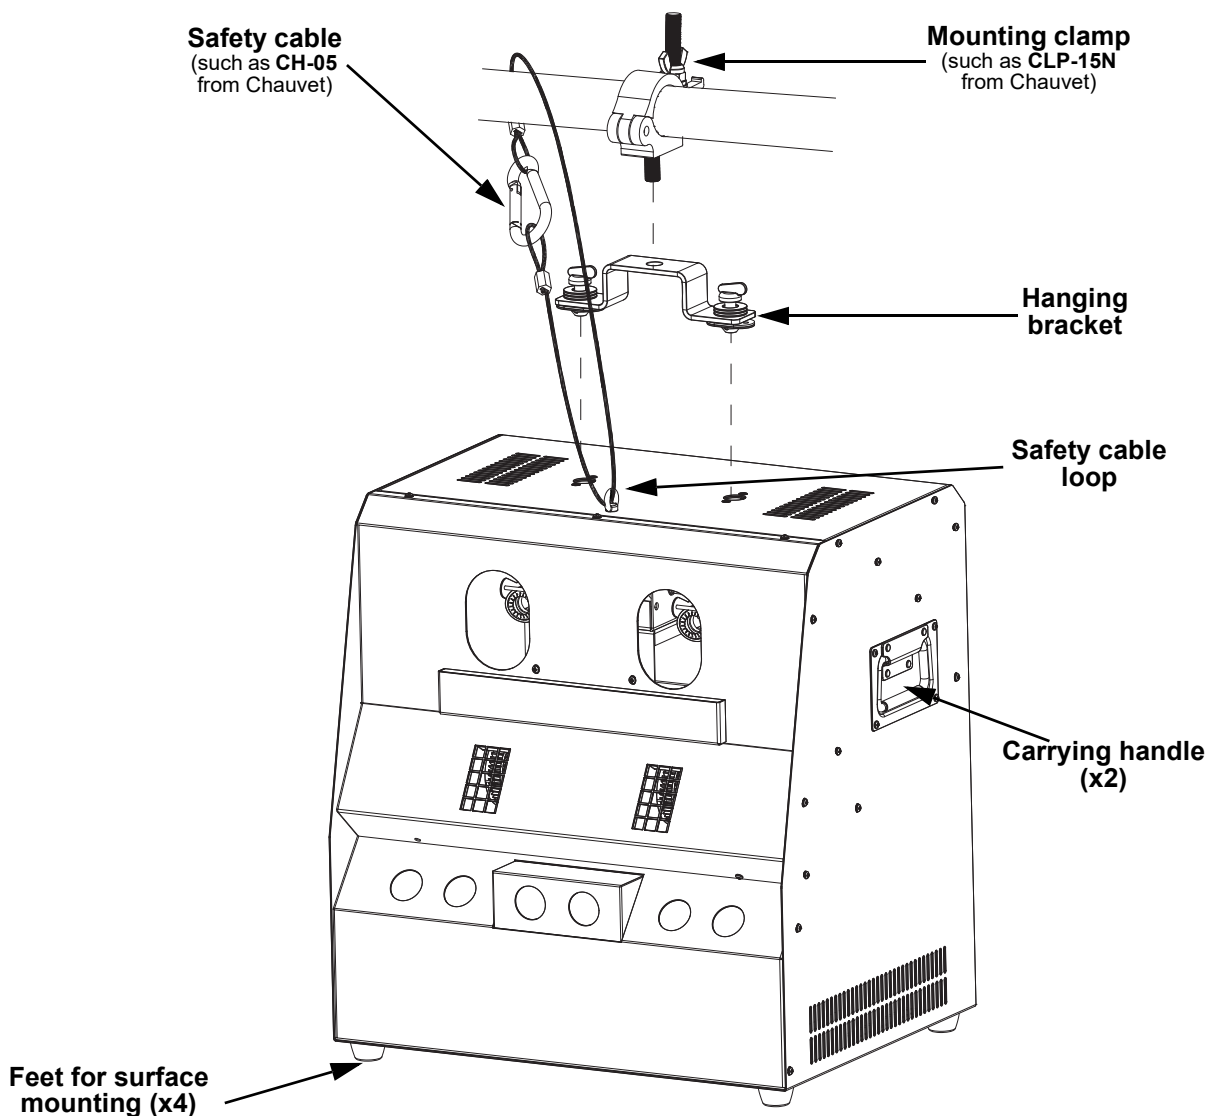

4. Operation

Control Panel Operation

To access the control panel functions, use the four buttons located underneath the display. Please refer to the [Product Overview](#) to see the button locations on the control panel.

Button	Function
<MENU>	Exits from the current menu or function
<UP/TIMER>	UP navigates upwards through the menu list and increases the numeric value when in a function. TIMER starts the timer controlled operation.
<DOWN/VOLUME>	DOWN navigates downwards through the menu list and decreases the numeric value when in a function. VOLUME triggers the pump to modify the output volume.
<ENTER/STOP>	ENTER enables the currently displayed menu or sets the currently selected value into the selected function. STOP turns the fog output off.

Menu Map

Refer to the Hurricane Bubble Haze X2 Q6 product page on www.chauvetdj.com for the latest menu map and software.

Main Level	Programming Levels	Description
Interval Set	5–200s	Sets the interval between output
Duration Set	5–200s	Sets the duration of the output
Bubble Output	OFF	Bubble output off
	ON	Bubble output on
Haze Output	1–100%	Haze volume, low to high
Fan Speed	1–100%	Blower fan speed, slow to fast
CH1 LED Color	OFF	Disable the CH1 button on the WRC
	1–17	Program CH1 on the WRC with LED color option 1–17
CH2 LED Color	OFF	Disable the CH2 button on the WRC
	1–17	Program CH2 on the WRC with LED color option 1–17
CH3 LED Color	OFF	Disable the CH3 button on the WRC
	1–17	Program CH3 on the WRC with LED color option 1–17
CH4 LED Color	OFF	Disable the CH4 button on the WRC
	1–17	Program CH4 on the WRC with LED color option 1–17
Color Speed	1–100	Color speed, slow to fast
DMX Address	1–512	Sets the DMX starting address
Clean Mode	OFF	Clean Mode off
	ON	Cleaning mode on



- For the bubble cleaning mode, use clean water to rinse out the bubble mechanism.
- Through the display menu, the Clean Mode will run for 2 minutes before reverting to standby.



Use the Clean Mode after every use.

LED Color Options

Color Number	Color Description	Color Number	Color Description
1	Red	10	Green + UV
2	Green	11	Blue + UV
3	Blue	12	Yellow + UV
4	UV	13	Magenta + UV
5	Cyan	14	Cyan + UV
6	Magenta	15	White + UV (all on)
7	Yellow	16	4 Color Chase
8	White	17	14 Color Chase
9	Red + UV		

DMX Configuration

The Hurricane Bubble Haze X2 Q6 works with a DMX controller. Information about DMX is in the Chauvet DMX Primer, which is available from the Chauvet website

https://www.chauvetprofessional.com/wp-content/uploads/2016/06/DMX_Primer.pdf

Starting Address

The Hurricane Bubble Haze X2 Q6 uses up to 12 DMX channels, which defines the highest recommended address to **501**.

When selecting a starting DMX address, always consider the number of DMX channels the DMX mode uses. If the starting address is set too high, access to some channels could be restricted.

For information about the DMX protocol, download the DMX Primer from www.chauvetdj.com.

To select the personality and starting address, do the following:

1. Press **<MENU>** repeatedly until **DMX Address** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select the starting address, from **1–501**.
4. Press **<ENTER>**.

DMX Channel Assignments and Values

Channel	Function	Value	Percent/Setting
1	Bubble Output	000 ⇔ 010	Off
		011 ⇔ 255	On
2	Haze Output	000 ⇔ 010	No function
		011 ⇔ 255	Haze volume, low to high
3	Fan Speed	000 ⇔ 255	Blower fan speed, slow to fast
4	Clean Mode	000 ⇔ 010	No function
		011 ⇔ 255	Bubble cleaning mode on (bubble pump only)
5	Dimmer	000 ⇔ 010	No function
		011 ⇔ 255	0–100%
6	Red	000 ⇔ 010	No function
		011 ⇔ 255	0–100%
7	Green	000 ⇔ 010	No function
		011 ⇔ 255	0–100%
8	Blue	000 ⇔ 010	No function
		011 ⇔ 255	0–100%
9	UV	000 ⇔ 010	No function
		011 ⇔ 255	0–100%
10	Color Macro	000 ⇔ 010	No function
		011 ⇔ 255	Color macros
11	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
12	Color Macro Speed	000 ⇔ 010	No function
		011 ⇔ 255	Color macro speed, slow to fast



- For Continuous Output mode, set channel 2 from 011 ⇔ 126.
- Fluid consumption will be significantly increased during Continuous Output mode.



- For the bubble cleaning mode, use clean water to rinse out the bubble mechanism.
- Through the DMX, the Clean Mode will run indefinitely.



Use the Clean Mode after every use.

Standalone Configuration

Set the product in one of the standalone modes to operate without a DMX controller.



Never connect a product that is operating in any standalone mode to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.

Interval Set

To set the length of time between periods of output, follow the instructions below.

1. Press **<MENU>** repeatedly until **Interval Set** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the interval, from **5–200s** (seconds).
4. Press **<ENTER>**.

Duration Set

To set the duration of each output period, do the following:

1. Press **<MENU>** repeatedly until **Duration Set** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the duration, from **5–200s** (seconds).
4. Press **<ENTER>**.

Bubble Output

To turn the bubble output of the Hurricane Bubble Haze X2 Q6 on or off, follow the instructions below.

1. Press **<MENU>** repeatedly until **Bubble Output** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select from **OFF** or **ON**.
4. Press **<ENTER>**.

Haze Output

To adjust the haze volume of the Hurricane Bubble Haze X2 Q6, do the following:

1. Press **<MENU>** repeatedly until **Haze Output** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the haze volume, from **1–100%**.
4. Press **<ENTER>**.

Blower Fan Speed


To adjust the blower fan speed of the Hurricane Bubble Haze X2 Q6, follow the instructions below.

1. Press **<MENU>** repeatedly until **Fan Speed** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the blower fan speed, from **1–100%**.
4. Press **<ENTER>**.

Wireless Remote Controller Configuration

Haze Output

It is possible to trigger the Hurricane Bubble Haze X2 Q6 to produce haze from up to 100 ft away. To do this, use the FC-W wireless remote control and do the following:

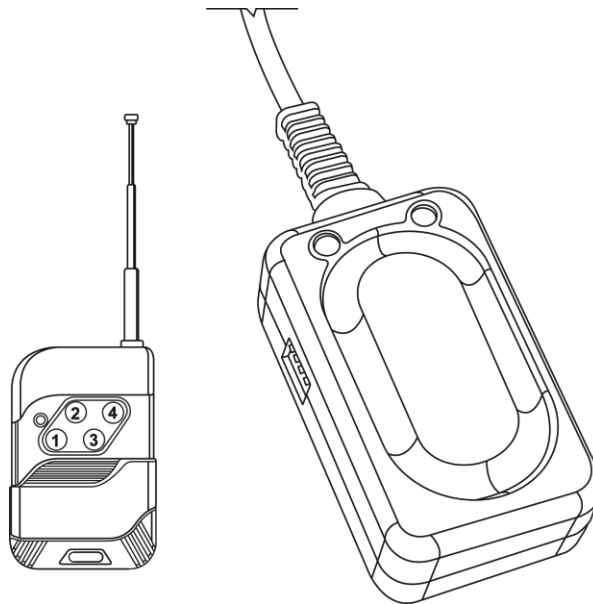

Wireless Transmitter

Wireless Receiver

1. Plug the Hurricane Bubble Haze X2 Q6 in to power. Wait 3 to 4 minutes for the product to heat up.
2. Plug the wireless receiver into the WRC socket on the back of the product. (See [Product Overview](#)).
3. Press the <1>, <2>, <3>, or <4> button on the wireless transmitter to trigger haze output. (See www.chauvetdj.com/products/wireless-remote-controller-fc-w/ for more information on addressing the FC-W).
4. Press the same button to stop haze output.



- Ensure the transmitter has an unobstructed view of the product for maximum performance.

LED Color Options

It is also possible to change the product's color output using the transmitter. To change the color output:

1. On the product's control panel, press <MENU> repeatedly until **CH1 LED Color**, **CH2 LED Color**, **CH3 LED Color**, or **CH4 LED Color** shows on the display.
2. Press <ENTER>.
3. Use <UP> or <DOWN> to select the desire color, from **OFF** (no color output for the selected button) or **1-17**.
4. Press <ENTER>.

Wireless Transmitter

The wireless transmitter buttons <1>, <2>, <3>, and <4> correspond to the **CH1 LED Color**, **CH2 LED Color**, **CH3 LED Color**, **CH4 LED Color** functions in the product.

1. On the transmitter, press the <1>, <2>, <3>, or <4> button to turn on the color function that was previously selected.
2. Press the same transmitter button to turn off the color function and the haze.

Color Speed

To set the speed of the color macros, follow the instructions below.

1. Press **<MENU>** repeatedly until **Color Speed** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the color speed, from **1–100**.
4. Press **<ENTER>**.

Master/Slave Mode

The Master/Slave mode allows a single Hurricane Bubble Haze X2 Q6 product (the “master”) to control the actions of one or more Hurricane Bubble Haze X2 Q6 products (the “slaves”) without the need of a DMX controller. The master product will be set to operate in either standalone mode or with the IRC-6, while the slave products will be set to operate in slave mode. Once set and connected, the slave products will operate in unison with the master product.

Configure the products as indicated below.

Slave products:

1. Press **<MENU>** repeatedly until **DMX Address** shows on the display.
2. Press **<ENTER>**.
3. Set the DMX address to **1**.
4. Connect the DMX input of the first slave product to the DMX output of the master product.
5. Connect the DMX input of the subsequent slave products to the DMX output of the previous slave product.
6. Finish setting and connecting all the slave products.

Master product:


1. Press **<MENU>** repeatedly until **DMX Address** shows on the display.
2. Press **<ENTER>**.
3. Set the DMX address to **1**.
4. Set the master product to operate in standalone mode or with the WRC.
5. Make the master product the first product in the DMX daisy chain.



- **Configure all the slave products before connecting the master to the daisy chain.**
- **Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.**
- **Do not connect more than 31 slaves to the master.**

5. Maintenance

Clean Mode

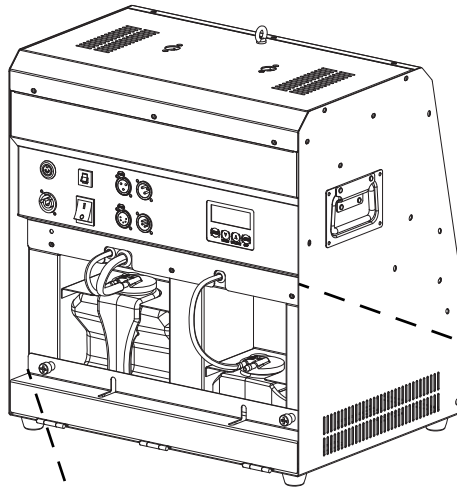


To clean the bubble mechanism with the Clean Mode:

1. Unscrew the cap from the bubble fluid reservoir.
2. Place the in hose in a container of clean water.
3. Place the out hose where it can safely drain.
4. Run the Clean Mode through the menu or DMX.
5. Thoroughly rinse the bubble fluid reservoir.
6. Restore the hoses and cap to the bubble fluid reservoir.
7. The Hurricane Bubble Haze X2 Q6 may now be stored until its next use.

NOTE: Use the Clean Mode after every use.

Bubble fluid reservoir
(rinse with clean water)

Haze fluid reservoir
(clean with Fog Machine Cleaner Fluid)

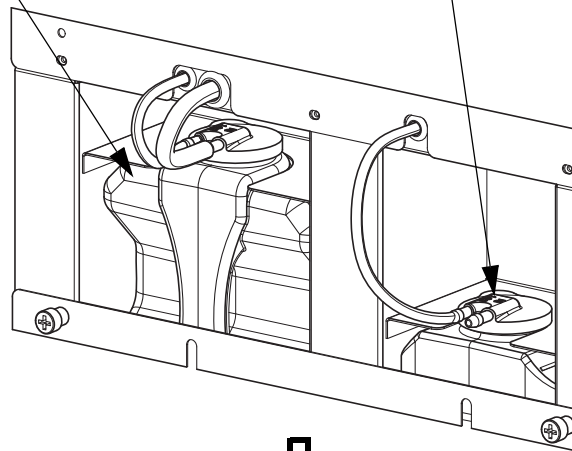


In hose
(place in clean water)

Clean water

Drainage

Out hose
(drains used fluid)

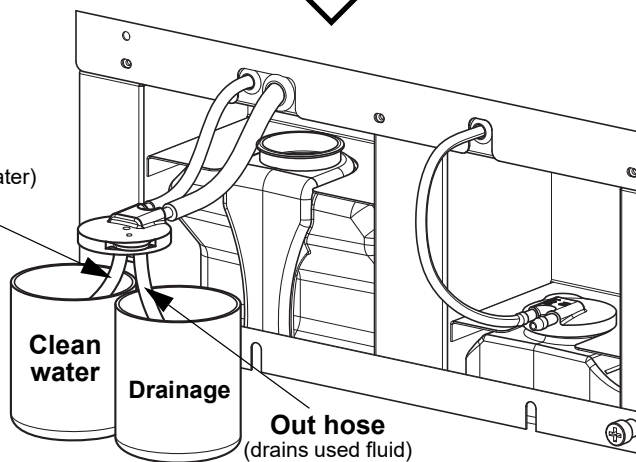

Fog Machine Maintenance

Proper maintenance of Chauvet atmospheric products will increase the reliability and lifespan of products. Maintenance should be completed every 30-90 days, depending on how frequently products are used.



- **When performing maintenance, use Chauvet Fog Cleaner Quart (FCQ) for U.S., or cleaning Fluid 250 (CF250) for EU products. Run the fluid through the system to reduce the accumulation of particulate matter in the heating element.**
- **DO NOT allow the atmospheric product to become clogged. Once a product is clogged, the cleaning procedure is unlikely to effectively clear the clog.**

The recommended cleaning procedure is as follows:

1. Unplug the product from power.
2. Remove the hose from the fluid tank/reservoir. Remove the FCQ/CF250 screw cap and place the hose in the Fog Cleaner bottle.
3. Connect the product to power and allow it to warm up (if not already warmed up).
4. Run the FCQ/CF250 through the product in a well-ventilated area for 60-90 seconds of continuous, full output. Some products require multiple cycles to achieve this.



DO NOT allow the product to run dry!

5. Move the hose from the FCQ/CF250 to a small bottle with distilled water (only use distilled water, not tap or any other water or liquid). Run distilled water through the product for at least 30 seconds to clear any remaining cleaning solution from the pump and heater.



- **Turn off the product when not in use or when storing.**
- **DO NOT leave the cleaning solution in the product.**
- **DO NOT operate the product without fluid at any time.**
- **DO NOT leave Chauvet atmospheric fluid in the product tank/reservoir for more than 10 days without use.**



Fog Cleaner Quart (FCQ) and Cleaning Fluid 250 (CF250) were specifically developed by Chauvet to clean Chauvet atmospheric products equipped with heaters. Use FCQ/CF250 regularly, no longer than 90 days between cleanings (30-60 days if the product is used more frequently), to prevent shortening the life of the product.

Storage

Before storing the Chauvet atmospheric product, run FCQ/CF250 through the system as described in the cleaning procedure above and do not refill the tank with atmospheric fluid before storing the product.



Test-run the Chauvet atmospheric products monthly to achieve the best performance.

Chauvet does not guarantee products will withstand storage for long durations, even if the cleaning process is followed. Please use caution and test regularly to ensure the product continues to function properly.

6. Technical Specifications

Dimensions and Weight

Length	Width	Height	Weight
16.8 in (429 mm)	12.48 in (317 mm)	18.07 in (459 mm)	34.6 lb (15.8 kg)

Note: Dimensions in inches are rounded.

Power

Power Supply Type	Range	Voltage Selection
Fixed	120 VAC, 60 Hz or 230 VAC, 50 Hz	Fixed
Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption	650 W	650 W
Operating Current	4.5 A	2.3 A
Breaker	6 A, 250 V	5 A, _250 V
Power I/O	U.S./Worldwide	UK/Europe
Power input connector	powerCON compatible	powerCON compatible
Power cable plug	Edison (U.S.)	Local Plug

Operation

Heat-Up Time	Tank Capacity (Haze)	Tank Capacity (Bubble)
3 min	0.3 gal (1.3 l)	0.9 gal (3.5 l)
Fog Output	Haze Fluid Consumption	Bubble Fluid Consumption
4500 cfm	60 ml/min	18.5 ml/min

Thermal

Maximum External Temperature	Cooling System
104 °F (40 °C)	Convection

DMX

I/O Connector	Channel Range
3- and 5-pin XLR	12

Ordering

Product Name	Item Code	UPC Number
Hurricane Bubble Haze X2 Q6	05071715	781462220631
Hurricane Bubble Haze X2 Q6 (220V)	05071716	781462220648



Contact Us

General Information	Technical Support
Chauvet World Headquarters	
Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetdj.com
Chauvet U.K.	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: UKtech@chauvetlighting.eu Website: www.chauvetdj.eu
Chauvet Benelux	
Address: Vaartlaan 9 9800 Deinze Belgium Voice: +32 9 388 93 97	Email: BNLtech@chauvetlighting.eu Website: www.chauvetdj.eu
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: FRtech@chauvetlighting.fr Website: www.chauvetdj.eu
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: DEtech@chauvetlighting.de Website: www.chauvetdj.eu
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: servicio@chauvet.com.mx Website: www.chauvetdj.mx

Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration.

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.