

INTIMIDATOR SPOT 160 ILS

FIRMWARE UPDATE PROCEDURES

These firmware updates provide bug fixes and improvements to your Intimidator Spot 160 ILS experience. Please review all information below prior to updating your fixture.

<u>US Software Version</u>	<u>EU Software Version</u>	<u>Description</u>
V2	V2	Fixes a bug on the gobo wheel when used with the ILS Command

Special Notes:

1. Do not use a thumb drive greater than 32GB.
2. The thumb drive must be formatted to FAT32.
3. The downloaded firmware file must be placed in the root directory on the thumb drive (no folders).

Firmware Update Instructions:

1. Download the ZIP file onto your computer and extract the folder.
2. Transfer the contents from the folder onto a USB thumb drive.
3. Hold down the menu button then power on the fixture to put it into upload mode.
4. Insert the USB thumb drive into the USB port on the rear of your unit, the Intimidator Spot 160 ILS will automatically find the firmware and apply it.
5. The fixture will reset itself automatically and display the new firmware version during startup.
6. The USB thumb drive can be removed after the fixture restarts.

