

Pinspot Bar

User Manual



Edition Notes

The Pinspot Bar User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the Pinspot Bar as of the release date of this edition.

Trademarks

Chauvet, Chauvet DJ, the Chauvet logo, and Pinspot Bar are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

© Copyright 2024 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage, or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident, or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision; however, Chauvet has no obligation to make, and does not commit to make, any such revisions.

Document Revision

Go to www.chauvetdj.com for the latest version.

Revision	Date	Description
2	11/2024	Updated format; added IRC-6 remote control functions

TABLE OF CONTENTS

1. Before You Begin	1
What Is Included	1
Unpacking Instructions.....	1
Claims	1
Text Conventions	1
Symbols	1
Safety Notes.....	2
RF Exposure Warning for North America and Australia.....	2
2. Introduction.....	3
Product Overview	3
Product Dimensions	3
3. Setup.....	4
AC Power	4
Fuse Replacement	4
Power Linking.....	4
Mounting	5
Orientation.....	5
Rigging.....	5
4. Operation.....	6
Control Panel Operation.....	6
Menu Map	6
DMX Configuration.....	7
Starting Address.....	7
D-Fi USB Connectivity	8
D-Fi USB Compatibility	8
D-Fi USB Configuration.....	8
DMX Channel Assignments and Values	9
11Ch / 6Ch	9
1Ch.....	9
Standalone Configuration.....	10
Automatic Program	10
Auto Program Speed.....	10
Fade	10
Manual Programs.....	10
Strobe.....	10
Sound-Active Program	10
Sound Sensitivity.....	11
DMX Failure	11
Screen Display	11
Factory Reset.....	11
IRC-6 Infrared Remote Control	12
IRC-6 Operation	12
Master/Slave Mode	13
D-Fi USB Master/Slave Mode	13
Slave products	13
Master product	13
5. Maintenance.....	14
Product Maintenance	14
6. Technical Specifications.....	15
Contact Us.....	16
Warranty & Returns.....	16

1. Before You Begin

What Is Included

- Pinspot Bar
- Power cord
- 2 Omega brackets
- 6x 10° diffusers
- 6x 20° diffusers
- 6x 2700 K CTO filters
- Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims




If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
<ENTER>	A key to be pressed on the product's control panel
ON	A value to be entered or selected

Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Safety Notes

These Safety Notes include important information about installation, use, and maintenance of the Pinspot Bar.



- **ALWAYS:**

- ◆ Connect to a grounded circuit.
- ◆ Connect to operating voltages as specified on the product's spec sticker.
- ◆ Disconnect from power before replacing the fuse.
- ◆ Disconnect from its power source during periods of inactivity.
- ◆ Use a safety cable when suspending overhead.
- ◆ Heed all restrictions and warnings on the spec sticker.
- ◆ Mount in a location with at least 20 in (50 cm) of ventilation.
- ◆ Replace the fuse with the same type and rating.
- ◆ Use a clamp with a captive bolt when a single hanging bracket is used.



- In the event of a serious operating problem, stop using immediately.

- **DO NOT:**

- ◆ Open this product or attempt any repairs. It contains no user-serviceable parts.
- ◆ Look at the light source when the product is on.
- ◆ Use if the power cable is crimped or damaged.
- ◆ Disconnect by pulling on the power cable.
- ◆ Allow flammable materials close to the product when it is operating.
- ◆ Touch the housing when it is on.
- ◆ Block any ventilation holes/slots in the housing.
- ◆ Connect to a dimmer or rheostat.
- ◆ Carry the product by its power cable.
- ◆ Operate in temperatures higher than 104°F (40°C).
- ◆ Expose to environments that exceed the Ingress Protection (IP) rating.
- ◆ Expose to rain or moisture.
- ◆ Use outdoors.
- ◆ Submerge.
- ◆ Set this product on a flammable surface.




Keep this User Manual for future use. If the product is sold to someone else, be sure that they also receive this document.

RF Exposure Warning for North America and Australia

Warning! This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the user. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



2. Introduction

Product Overview

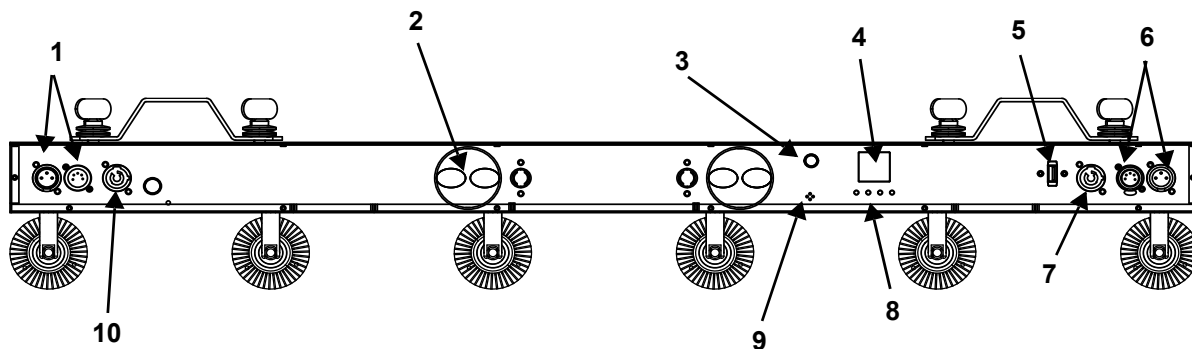

#	Name	#	Name
1	DMX in	6	DMX out
2	Safety loop	7	Power out
3	IR sensor	8	Menu buttons
4	LED display	9	Microphone
5	D-Fi USB	10	Power in

Product Dimensions

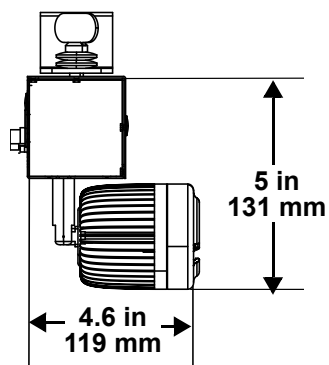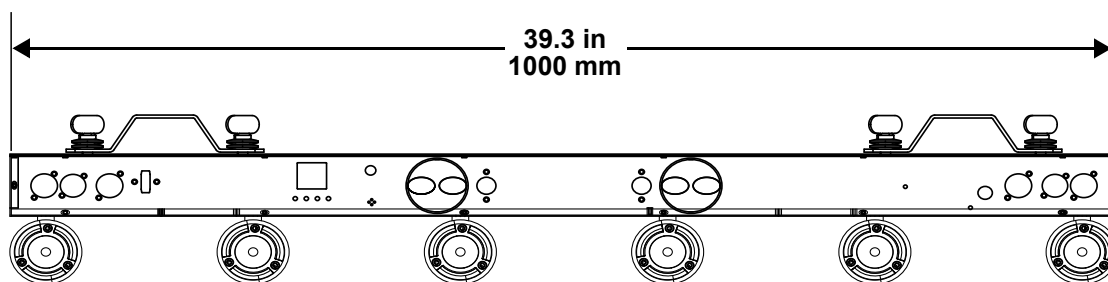

3. Setup

AC Power

The Pinspot Bar has an auto-ranging power supply, and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart.

The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

Fuse Replacement

1. Disconnect the product from power.
2. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
3. Pry the fuse holder out of the housing.
4. Remove the blown fuse from the holder and replace with a fuse of the exact same type and rating (T 3.15 AL, 250 V).
5. Insert the fuse holder back in place and reconnect power.




Disconnect the product from the power outlet before replacing the fuse.

Power Linking

This product provides power linking via the outlet located in the back of the product. See the diagram below for further explanation.

Power Linking Diagram

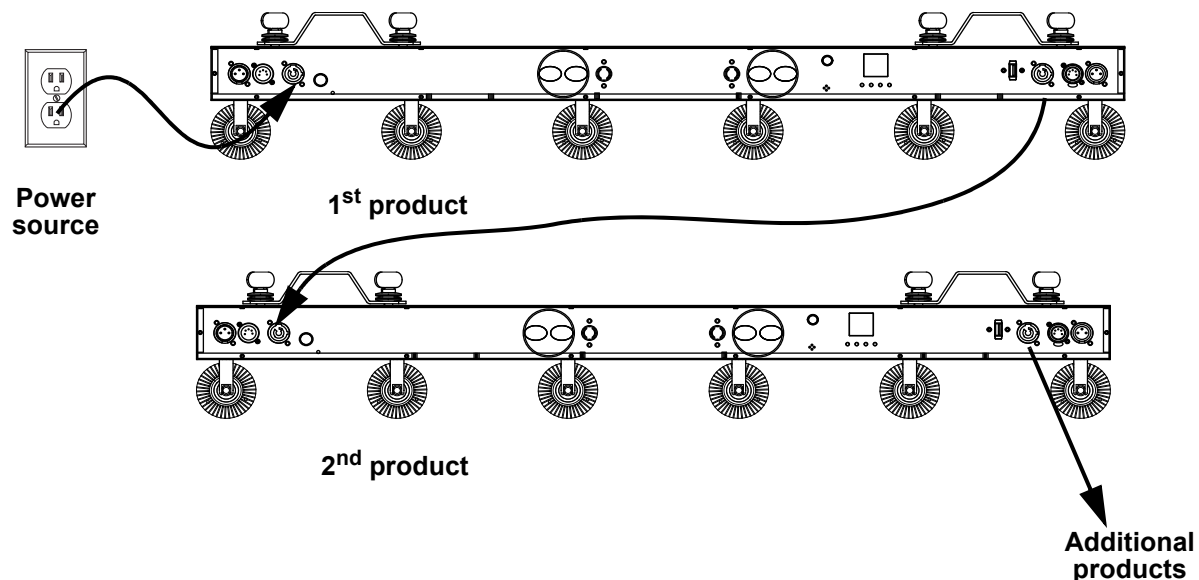

It is possible to link up to 8 Pinspot Bar products on 120 VAC or up to 13 products on 230 VAC.



The power linking diagram shown above corresponds to the North American version of the product ONLY! If using the product in other markets, consult with the local Chauvet distributor as power linking connectors and requirements may differ by country or region.

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).

Orientation


The Pinspot Bar may be mounted in any position; however, make sure adequate ventilation is provided around the product.

Rigging

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) section for weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, such as an elevated platform or a truss.
- When power linking multiple products, mount the products close enough for power linking cables to reach.

Mounting Diagram

Product Mounting (3 ways)

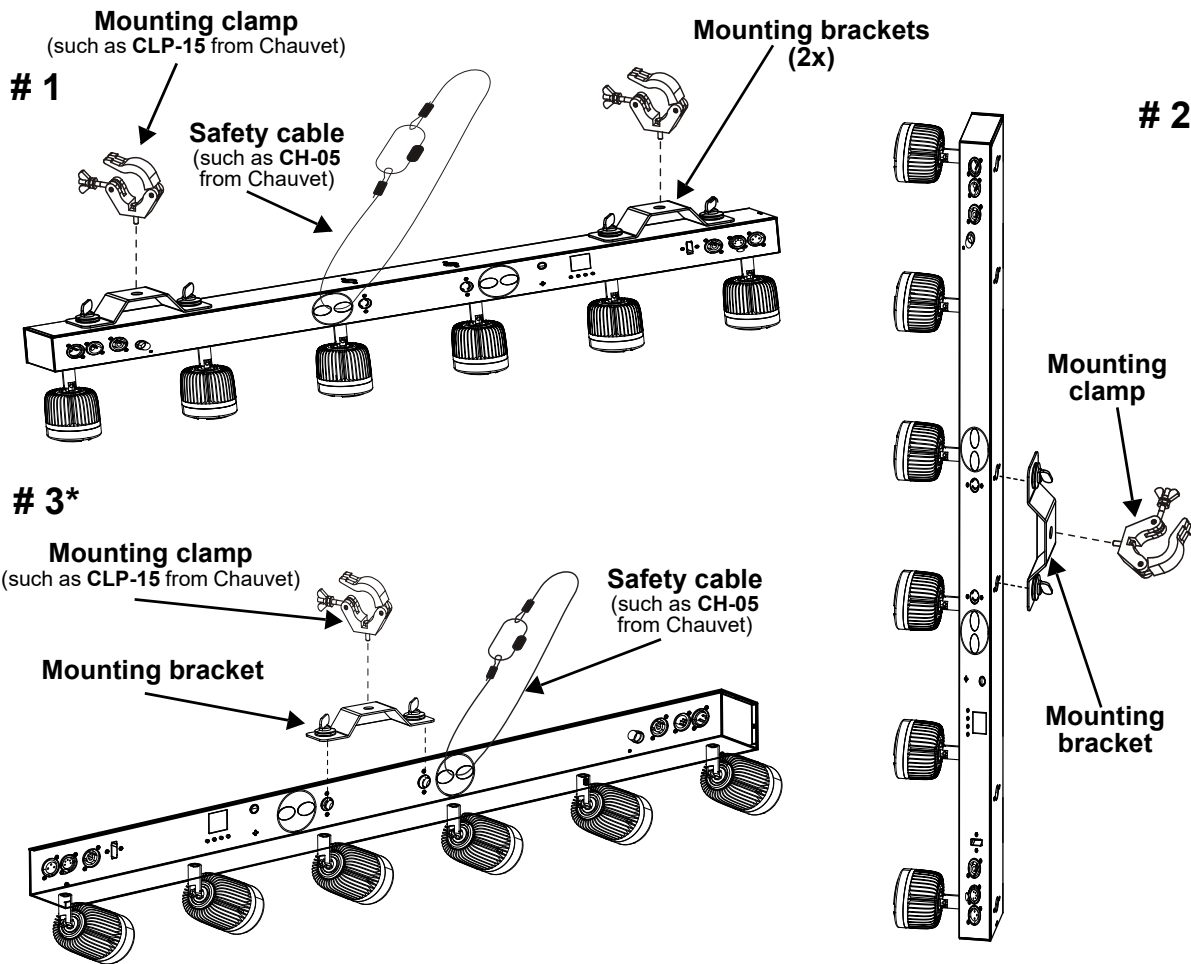

* The 3rd mounting option is for pipe/base mounting.

4. Operation

Control Panel Operation

To access the control panel functions, use the four buttons located underneath the display. Refer to the [Product Overview](#) to see the button locations on the control panel.

Button	Function
<MENU>	Exits from the current menu or function
<UP>	Navigates upwards through the menu list or increases a selected numeric value
<DOWN>	Navigates downwards through the menu list or decreases a selected numeric value
<ENTER>	Enables the currently displayed menu or sets a selected value into the selected function

Menu Map

Mode	Programming Levels		Description
Auto	Program	01–11	Automatic programs
	Speed	01–99	Speed for auto programs
	Fade	YES	Auto fade after program
		NO	
Sound	Program	01–10	Sound-active programs
	Sens	01–99	Sound sensitivity
Manual	Pod1	000–255	Manually adjust the dimmer per pod or for all pods
	Pod2		
	Pod3		
	Pod4		
	Pod5		
	Pod6		
	All pods		
	Strobe	000–099	Strobe rate
DMX	Address	001–502	Select DMX address (highest channel restricted to personality chosen)
	Channel	1Ch	1-channel DMX mode
		6Ch	6-channel DMX mode
		11Ch	11-channel DMX mode
Slave	Slave1		Select slave mode
	Slave2		
	Slave3		
Settings	IR	ON	Turn infrared on or off
		OFF	
	DMX Fail	Auto	Revert to auto mode
		Black	Blackout
		Hold	Hold the last DMX signal received
		Sound	Revert to sound mode
	Screen	ON	Screen display always on
		OFF	Turn off display after 30 seconds of inactivity
Reset			Reset the product to factory default settings

DMX Configuration

The Pinpoint Bar works with a DMX controller. Information about DMX is in the Chauvet DMX Primer available from the Chauvet website:

http://www.chauvetlighting.com/downloads/DMX_Primer_rev05_WO.pdf.

Starting Address

When selecting a starting DMX address, always consider the number of DMX channels the selected DMX mode uses. Choosing a starting address that is too high could restrict the access to some of the product's channels.

The Pinpoint Bar uses up to 11 DMX channels, which defines the highest configurable address as **502**.

For more information about the DMX protocol, download the DMX Primer from www.chauvetdj.com.

To select the starting address, do the following:

1. Press **<MENU>** repeatedly until **1Ch**, **6Ch**, or **11Ch** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select the starting address, from **001–502**.
4. Press **<ENTER>**.

D-Fi USB Connectivity

The Pinspot Bar is able to become a D-Fi wireless receiver/transmitter with the use of the D-Fi USB from Chauvet DJ. Simply set the product's DMX Personality and DMX Address, set the DIP switch D-Fi receiving/transmitting channel, then plug it into the D-Fi USB port.



WARNING! DO NOT plug anything other than a D-Fi USB into the USB type B port. Doing so may cause damage to the product.



Once plugged in, the D-Fi USB will take over the product. Wired DMX and manual display control / menu buttons will be unavailable until the D-Fi USB is unplugged. The priority levels are:

1. D-Fi USB
2. Wired DMX
3. Manual Digital Display/Menu Buttons

D-Fi USB Compatibility

The D-Fi USB can receive a DMX signal from the D-Fi Hub and the FlareCON Air 2 as well as other D-Fi USB products.

D-Fi USB Configuration

1. Set the DMX Personality and DMX address on the Pinspot Bar.
2. Use the Chart provided to set **BOTH**:
 - the Channel, and then
 - The Receiving or Transmitting option


NOTE: DIP Switch 5 is for Transmitting OR Receiving, please choose carefully.

D-Fi USB DIP Switch Channels

Receiving →						Receiving →						Transmitting →						Transmitting →					
Ch.	1	2	3	4	T/R	Ch.	1	2	3	4	T/R	Ch.	1	2	3	4	T/R	Ch.	1	2	3	4	T/R
1						9						1						9					
2						10						2						10					
3						11						3						11					
4						12						4						12					
5						13						5						13					
6						14						6						14					
7						15						7						15					
8						16						8						16					

DMX Channel Assignments and Values

Pinspot Bar Zones for DMX Control

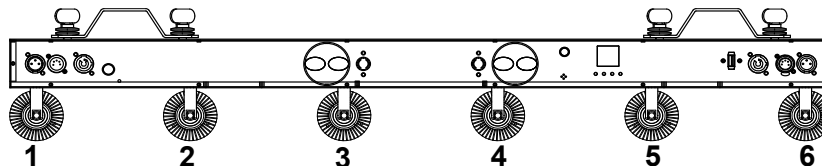

11Ch / 6Ch

6Ch	11Ch	Function	Value	Percent/Setting
1	1	Pod 1	000 ⇔ 255	0–100%
2	2	Pod 2	000 ⇔ 255	0–100%
3	3	Pod 3	000 ⇔ 255	0–100%
4	4	Pod 4	000 ⇔ 255	0–100%
5	5	Pod 5	000 ⇔ 255	0–100%
6	6	Pod 6	000 ⇔ 255	0–100%
–	7	Strobe	000 ⇔ 255	0–100%
–	8	Auto/Sound programs (Each auto/sound program has Fade and Snap functions)	000 ⇔ 034 No function 035 ⇔ 054 Auto program 1 / Sound 1 055 ⇔ 074 Auto program 2 / Sound 2 075 ⇔ 114 Auto program 3 / Sound 3 115 ⇔ 134 Auto program 4 / Sound 4 135 ⇔ 154 Auto program 5 / Sound 5 155 ⇔ 174 Auto program 6 / Sound 6 175 ⇔ 194 Auto program 7 / Sound 7 195 ⇔ 214 Auto program 8 / Sound 8 215 ⇔ 234 Auto program 9 / Sound 9 235 ⇔ 255 Auto program 10 / Sound 10	
–	9	Auto Speed	000 ⇔ 250	Auto program speed, slow to fast
–	10	Program mode	000 ⇔ 127 Auto program (Channel 8 will run in auto mode) 128 ⇔ 255 Sound program (Channel 8 will run in sound mode)	
–	11	Fade	000 ⇔ 127 Snap function (Channel 8 will activate snap function) 128 ⇔ 255 Fade function (Channel 8 will activate fade function)	

1Ch

Channel	Function	Value	Percent/Setting
1	All pods	000 ⇔ 255	0–100%

Standalone Configuration

Set the product in the standalone mode to control without a DMX controller.



Never connect a product that is operating in any standalone mode to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.

Automatic Program

To run an auto program on the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Auto** shows on the display.
2. Press **<ENTER>**.
3. Select **Program**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select an automatic program, from **01–11**.
6. Press **<ENTER>**.

Auto Program Speed

To adjust the auto program speed on the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Auto** shows on the display.
2. Press **<ENTER>**.
3. Select **Speed**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to increase or decrease the program speed, from **01–99**.
6. Press **<ENTER>**. The product will return to the last selected.

Fade

To enable or disable the fade function after the auto programs:

1. Press **<MENU>** repeatedly until **Auto** shows on the display.
2. Press **<ENTER>**.
3. Select **Fade**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select **YES** (to enable fade) or **NO** (to disable fade).
6. Press **<ENTER>**.

Manual Programs

To manually adjust the dimmer on a pod or all pods of the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Manual** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select **Pod 1–6** (to manually adjust the dimmer for pods 1 to 6) or **All pods** (to manually adjust the dimmer for all pods).
4. Press **<ENTER>**.

Strobe

To adjust the strobe rate of the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Manual** shows on the display.
2. Press **<ENTER>**.
3. Select **Strobe**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select the strobe rate, from **000–099**.
6. Press **<ENTER>**.

Sound-Active Program

To run a sound-active program on the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Sound** shows on the display.
2. Press **<ENTER>**.
3. Select **Program**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select a sound-active program, from **01–10**.
6. Press **<ENTER>**.

Sound Sensitivity

To adjust the sound sensitivity on the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Sound** shows on the display.
2. Press **<ENTER>**.
3. Select **Sens**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to increase or decrease the sound sensitivity, from **01–99**.
6. Press **<ENTER>**. The product will return to the last selected mode.



The product will only respond to low frequencies of music (bass and drums).

DMX Failure

To set the action that the fixture will do when the DMX fails on the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Settings** shows on the display.
2. Press **<ENTER>**.
3. Select **DMX Fail**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select **Auto** (revert to auto mode), **Black** (black out the fixture), **Hold** (hold the last DMX signal received), or **Sound** (revert to sound mode).
6. Press **<ENTER>**.

Screen Display

To enable or disable the screen display timer on the Pinspot Bar:

1. Press **<MENU>** repeatedly until **Settings** shows on the display.
2. Press **<ENTER>**.
3. Select **Screen**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select **ON** (to have the screen display always on) or **OFF** (to turn off display after 30 seconds of inactivity).
6. Press **<ENTER>**.

Factory Reset

To restore the Pinspot Bar to default factory settings:


1. Press **<MENU>** repeatedly until **Settings** shows on the display.
2. Press **<ENTER>**.
3. Select **Reset**.
4. Press **<ENTER>**.

IRC-6 Infrared Remote Control

The Pinspot Bar is compatible with the IRC-6 infrared remote control from Chauvet. To enable or disable the IR mode on the Pinspot Bar, follow the instructions below:

1. Press **<MENU>** repeatedly until **Settings** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select **IR**.
4. Press **<ENTER>**.
5. Press **<UP>** or **<DOWN>** to select **ON** or **OFF**.
6. Press **<ENTER>**.

IRC-6 Operation

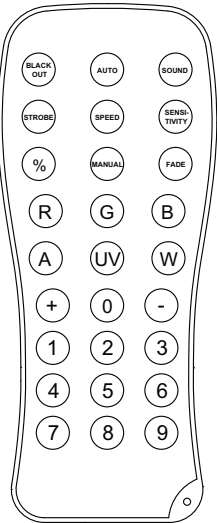IRC-6	Button	Function
	<AUTO>	Press to activate automatic mode, then use <+> or <-> to select a program
	<SPEED>	Press then use <+> or <-> to increase or decrease speed
	<SOUND>	Press to activate sound-active mode, then use <+> or <-> to select a program
	<SENSITIVITY>	Press then use <+> or <-> to increase or decrease sensitivity
	<FADE>	Press to activate fade mode, then use <+> or <-> to select a fading program
	<R>	Press to select Pod 1
	<G>	Press to select Pod 2
		Press to select Pod 3
	<A>	Press to select Pod 4
	<UV>	Press to select Pod 5
	<W>	Press to select Pod 6
	<MANUAL>	Press to select all pods
		Press to select an auto program
		<1> = Auto program 1 <6> = Auto program 6
		<2> = Auto program 2 <7> = Auto program 7
		<3> = Auto program 3 <8> = Auto program 8
		<4> = Auto program 4 <9> = Auto program 9
		<5> = Auto program 5 <0> = Auto program 10
	<+>	Press to increase speed, sensitivity, or to scroll up the list of programs
	<->	Press to decrease speed, sensitivity, or to scroll down the list of programs
	<BLACK OUT>	Press to turn off all the lights until the button is pressed again. NOTE: The IRC-6 will not respond to any inputs when Black Out is activated. If the product does not respond when a button is pressed, try pressing <BLACK OUT> . Black Out may have been activated.

Master/Slave Mode

The Master/Slave mode allows a single Pinspot Bar product (the “master”) to control the actions of one or more Pinspot Bar products (the “slaves”) without the need of a DMX controller. The master product will be set to operate in standalone or with the IRC-6, while the slave products will be set to operate in Slave mode. Once set and connected, the slave products will operate in unison with the master product.

Configure the products as indicated below.

Slave products:

1. Press **<MENU>** repeatedly until **11Ch** shows on the display.
2. Press **<ENTER>**.
3. Set the DMX address to **001**.
4. Connect the DMX input of the first slave product to the DMX output of the master product.
5. Connect the DMX input of the subsequent slave products to the DMX output of the previous slave product.
6. Finish setting and connecting all the slave products.

Master product:

1. Press **<MENU>** repeatedly until **Slave** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select **Slave1**.
4. Press **<ENTER>**.
5. Set the master product to operate in standalone or IR mode.
6. Make the master product the first product in the DMX daisy chain.



- Configure all the slave products before connecting the master to the daisy chain.
- Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.
- Do not connect more than 31 slaves to the master.

D-Fi USB Master/Slave Mode

The D-Fi USB allows a single Pinspot Bar product (the “master”) to control the actions of one or more Pinspot Bar products (the slaves) without the need of a DMX controller or DMX cables. The master (transmitter) product will be set to operate in either standalone mode or with the footswitch, whereas the slave (receiver) products will be set to operate in slave mode. Once set and connected, the slave products will operate in unison with the master product. Configure the products as indicated below:

Slave products

1. Press **<MENU>** repeatedly until **DMX** shows on the display.
2. Press **<ENTER>**.
3. Set the DMX address to **001**.
4. Press **<ENTER>**.
5. Set the DMX channel to either **1Ch**, **6Ch**, or **11Ch**.
6. Press **<ENTER>**.
7. Set D-Fi USB to receive on a specific channel, **1–16**.
8. Plug in the D-Fi USB.
9. Finish setting and configuring all the slave products.

Master product

1. Set the master product to operate in standalone mode.
2. Set the D-Fi USB to transmit on the D-Fi channel the slaves are receiving on.
3. Plug in the D-Fi USB.



- All products must be set to the same DMX personality, DMX address, and D-Fi channel.
- Configure all the slave products before configuring the master to transmit.
- Never connect a DMX controller to a D-Fi channel configured for Master/Slave operation because the controller may interfere with the signals from the master.

5. Maintenance

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean the lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint-free cotton cloth or a lens-cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.

6. Technical Specifications

Dimensions and Weight

Length	Width	Height	Weight
39 in (1000 mm)	4.6 in (119 mm)	5 in (131 mm)	9.4 lb (4.3 kg)

Note: Dimensions in inches are rounded.

Power

Power Supply Type	Range	Voltage Selection
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging

Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption	171 W	191 W
Operating current	1.4 A	0.8 A
Power-linking current (products)	8 A (8 products)	8 A (13 products)
Fuse	T 3.15 AL, 250 V	T 3.15 AL, 250 V

Power I/O	U.S./Worldwide	UK/Europe
Power input connector	Seetronic PowerCon	Seetronic PowerCon
Power output connector	Seetronic PowerCon	Seetronic PowerCon
Power cord plug	Edison (U.S.)	Local plug

Light Source

Type	Color	Quantity	Power	Current	Lifespan
LED	Warm white	6	15 W	3.6 A	50,000 hours

Photometrics

Beam Angle	Field Angle	Color Temperature	Lumens	Illuminance @ 2 m
5°	11°	4000 K	736	7,707 lux (per pod)

Thermal

Maximum External Temperature

104 °F (40 °C)

DMX

I/O Connector	Channel Range
3-pin and 5-pin XLR	1, 6, or 11

Ordering

Product Name	Item Code	UPC Number
Pinspot Bar	10031660	781462220082



Contact Us

General Information	Technical Support
Chauvet World Headquarters	
Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetdj.com
Chauvet U.K.	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: UKtech@chauvetlighting.eu Website: www.chauvetdj.eu
Chauvet Benelux	
Address: Stokstraat 18 9770 Kruishoutem Belgium Voice: +32 9 388 93 97	Email: BNLtech@chauvetlighting.eu Website: www.chauvetdj.eu
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: FRtech@chauvetlighting.fr Website: www.chauvetdj.eu
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: DEtech@chauvetlighting.de Website: www.chauvetdj.eu
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: servicio@chauvet.com.mx Website: www.chauvetdj.mx

Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration.

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.